




# SPARE PARTS LIST

ACCESSORIES AND TOOLS

T36P, Serial No. 0000001

T36P  
Ser. No. 0000001

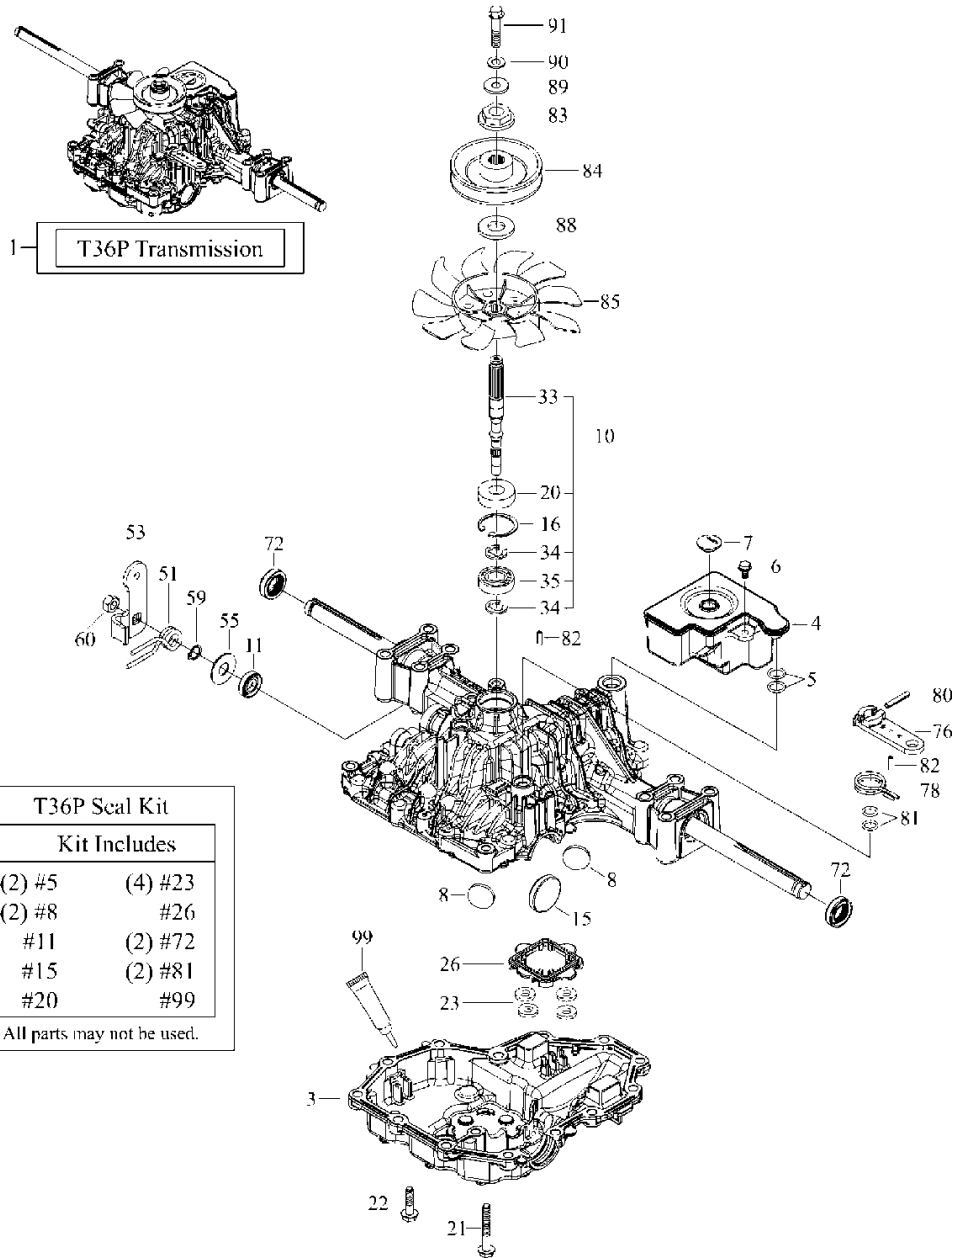

## TRANSMISSION

T36P, Serial No. 0000001

Ref	Part No	Description	Remark	QTY KIT
1	585 23 52-01	TRANSMISSION		1
3	582 15 07-01	CASE		1
4	582 15 09-01	RESERVOIR		1
5	585 46 94-01	O-RING		1
6	582 15 11-01	BOLT		1
7	582 15 12-01	CAP		1
8	505 56 39-01	MAGNET		1
10	582 16 43-01	SHAFT ASSY		1
11	582 16 24-01	SEAL		1
15	582 16 25-01	CAP		1
16	586 88 93-01	SNAP RING		1
20	582 16 26-01	SEAL		1
21	535 40 28-51	SCREW		1
22	535 40 28-28	SCREW		1
23	582 16 27-01	MAGNET		1
26	582 16 28-01	FILTER		1
33	582 16 44-01	SHAFT		1
34	582 16 29-01	RING		1
35	582 16 30-01	BEARING		1
51	582 16 31-01	TORSION SPRING		1
53	582 16 32-01	CONTROL LEVER		1
55	582 16 33-01	WASHER		1
59	582 16 34-01	RING		1
60	582 16 35-01	NUT		1
72	582 16 36-01	SEAL		1
76	582 16 37-01	ARM		1
78	535 40 28-39	RETURN SPRING		1
80	535 40 28-40	PIN RETAINING SCREW		1
81	535 41 46-19	O-RING		1
82	535 40 28-41	PIN RETAINING SCREW		1
83	506 98 66-01	DISTANCE		1
84	582 16 40-01	PULLEY		1
85	506 98 68-01	FAN		1
86	506 98 65-01	SPRING WASHER		1
88	582 16 41-01	COLLAR		1
89	578 97 53-01	WASHER		1
90	578 97 52-01	LOCKWASHER		1
91	578 97 51-01	BOLT		1
99	505 34 87-01	SEALING		1
200	582 16 42-01	SEAL KIT		1