# ILLUSTRATED PARTS LIST

## MFG. ID NO. 96041021000
## CUSTOMER CATALOG NO. YTH 223T
## PRODUCT NO. 960 41 02-10

GPL®

# TRACTOR - - MODEL NO. YTH 223T (96041021000), PRODUCT NO. 960 41 02-10

## DECALS 27

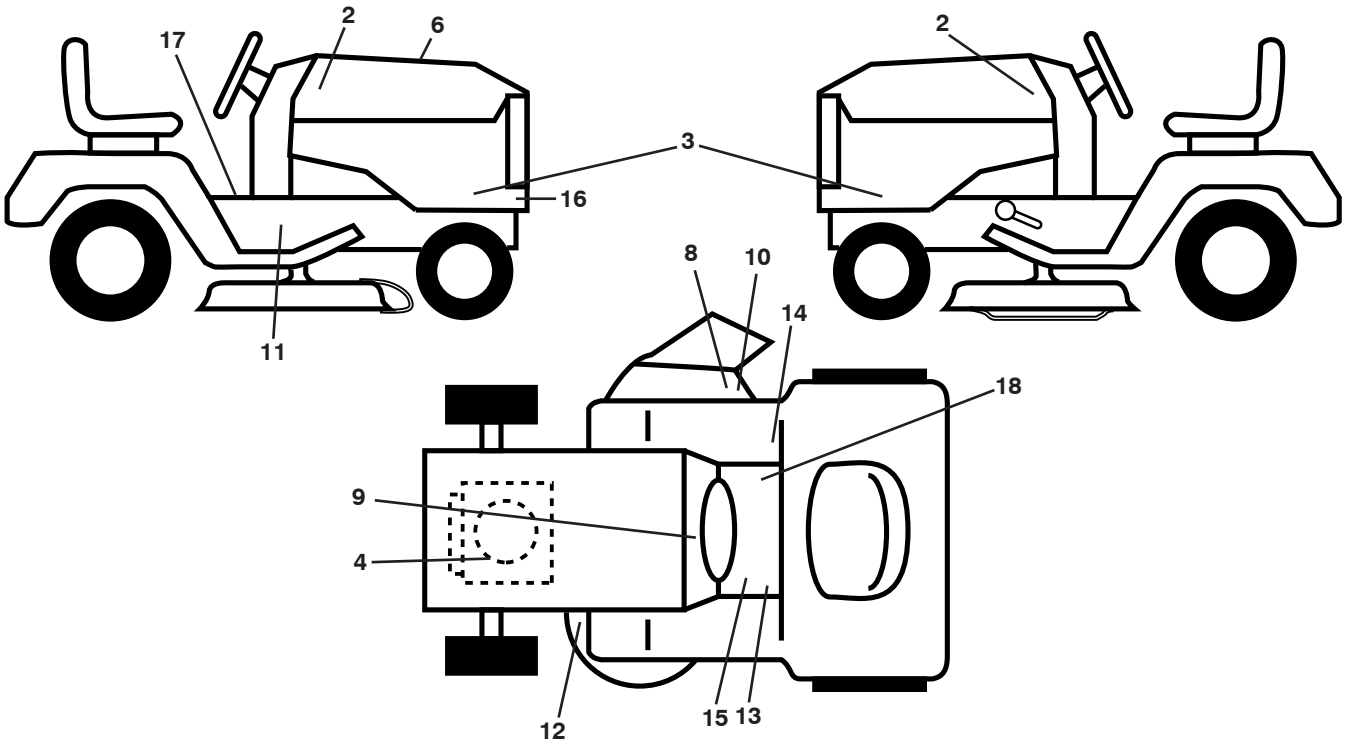


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 2 | 581 62 73-01 | Decal, Badge |
| 3 | 532 44 08-56 | Decal, Panel SD |
| 4 | 532 19 68-41 | Decal, Eng. HP |
| 6 | 532 43 94-28 | Decal, Replacement |
| 8 | 532 18 21-66 | Decal, Cutfinger |
| 9 | 532 14 50-05 | Decal, Battery Dnge/Poi |
| 10 | 532 19 63-57 | Decal, Defl. |
| 11 | 532 40 11-46 | Decal, Warning |
| 12 | 532 16 03-96 | Decal, Mower V-Belt Schematic |
| 13 | 532 40 03-89 | Decal, Warning Symbols |
| 14 | 532 18 04-32 | Decal, Fender |
| 15 | 532 15 97-37 | Decal, Brake/Clutch |
| 16 | 532 15 97-36 | Decal, Chassis |
| 17 | 532 14 08-37 | Decal, Saddle Brake |
| 18 | 532 17 83-02 | Decal, Oper. Cruise |
| - - | 532 16 25-98 | Decal, Drawbar |
| - - | 532 16 69-60 | Decal, Bypass |
| - - | 532 40 17-71 | Pad, Footrest, LH |
| - - | 532 40 37-73 | Pad, Footrest, RH |
| - - | 532 44 08-08 | Manual, Ops (Euro) |

## WHEELS AND TIRES

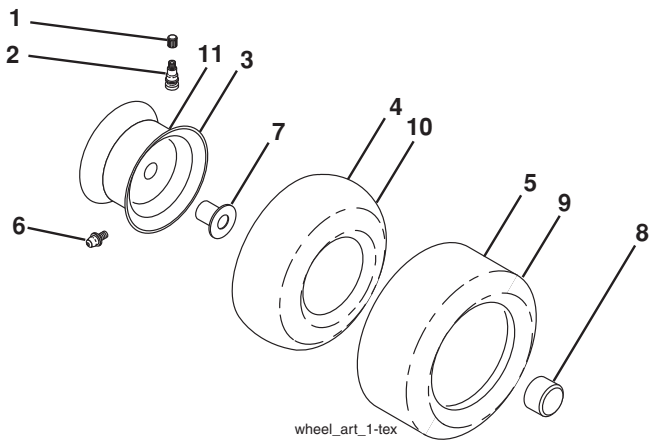


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 05 91-92 | Cap Valve Tire |
| 2 | 532 06 51-39 | Stem Valve |
| 3 | 532 13 83-36 | Rim Front Service |
| 4 | 532 05 99-04 | Tube Front (Service Item Only) |
| 5 | 532 10 62-22 | Tire TM Front 15 x 6.00-6 |
| 6 | 532 12 49-57 | Fitting Grease (Front Wheel Only) |
| 7 | 532 12 49-59 | Bearing Flange (Front Wheel Only) |
| 8 | 532 17 50-39 | Cap Axle Blk 1 50 x 1 00 |
| 9 | 532 12 20-82 | Tire TM Rear 30 x 10.00-8 |
| 10 | 532 12 49-26 | Tube Rear (Service Item Only) |
| 11 | 532 13 83-37 | Rim Asm 8" rear Service |
| - - | 532 14 43-34 | Sealant, Tire (10 oz. Tube) |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

# TRACTOR - - MODEL NO. YTH 223T (96041021000), PRODUCT NO. 960 41 02-10

## SCHEMATIC 38

SCH13

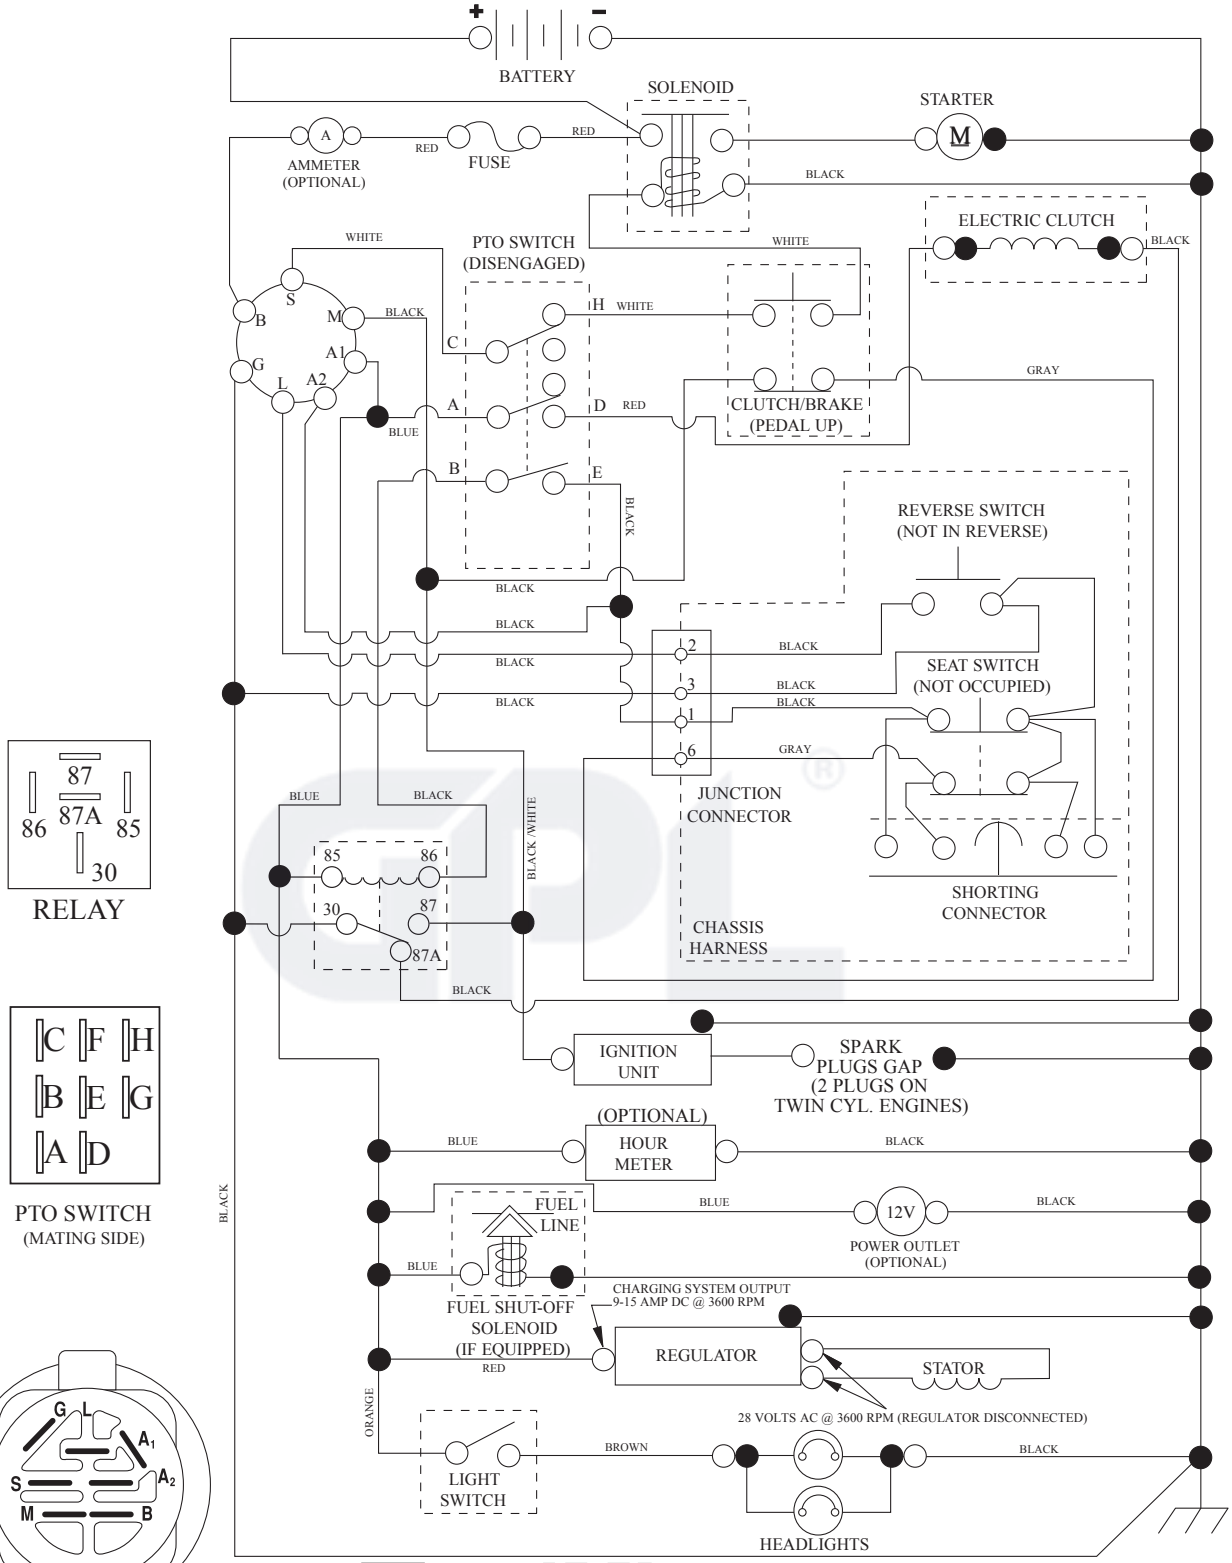


| POSITION | CIRCUIT "MAKE" | |
|---|---|---|
| OFF | M+G+A1 | |
| RUN/OVERRIDE | B+A1 | |
| RUN | B+A1 | L+A2 |
| START | B + S + A1 | |

WIRING INSULATED CLIPS

NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE RE-INSTALLED TO PROPERLY SECURE YOUR WIRING.

NON-REMOVABLE CONNECTIONS

REMOVABLE CONNECTIONS

# TRACTOR - - MODEL NO. YTH 223T (96041021000), PRODUCT NO. 960 41 02-10
## ELECTRICAL 32

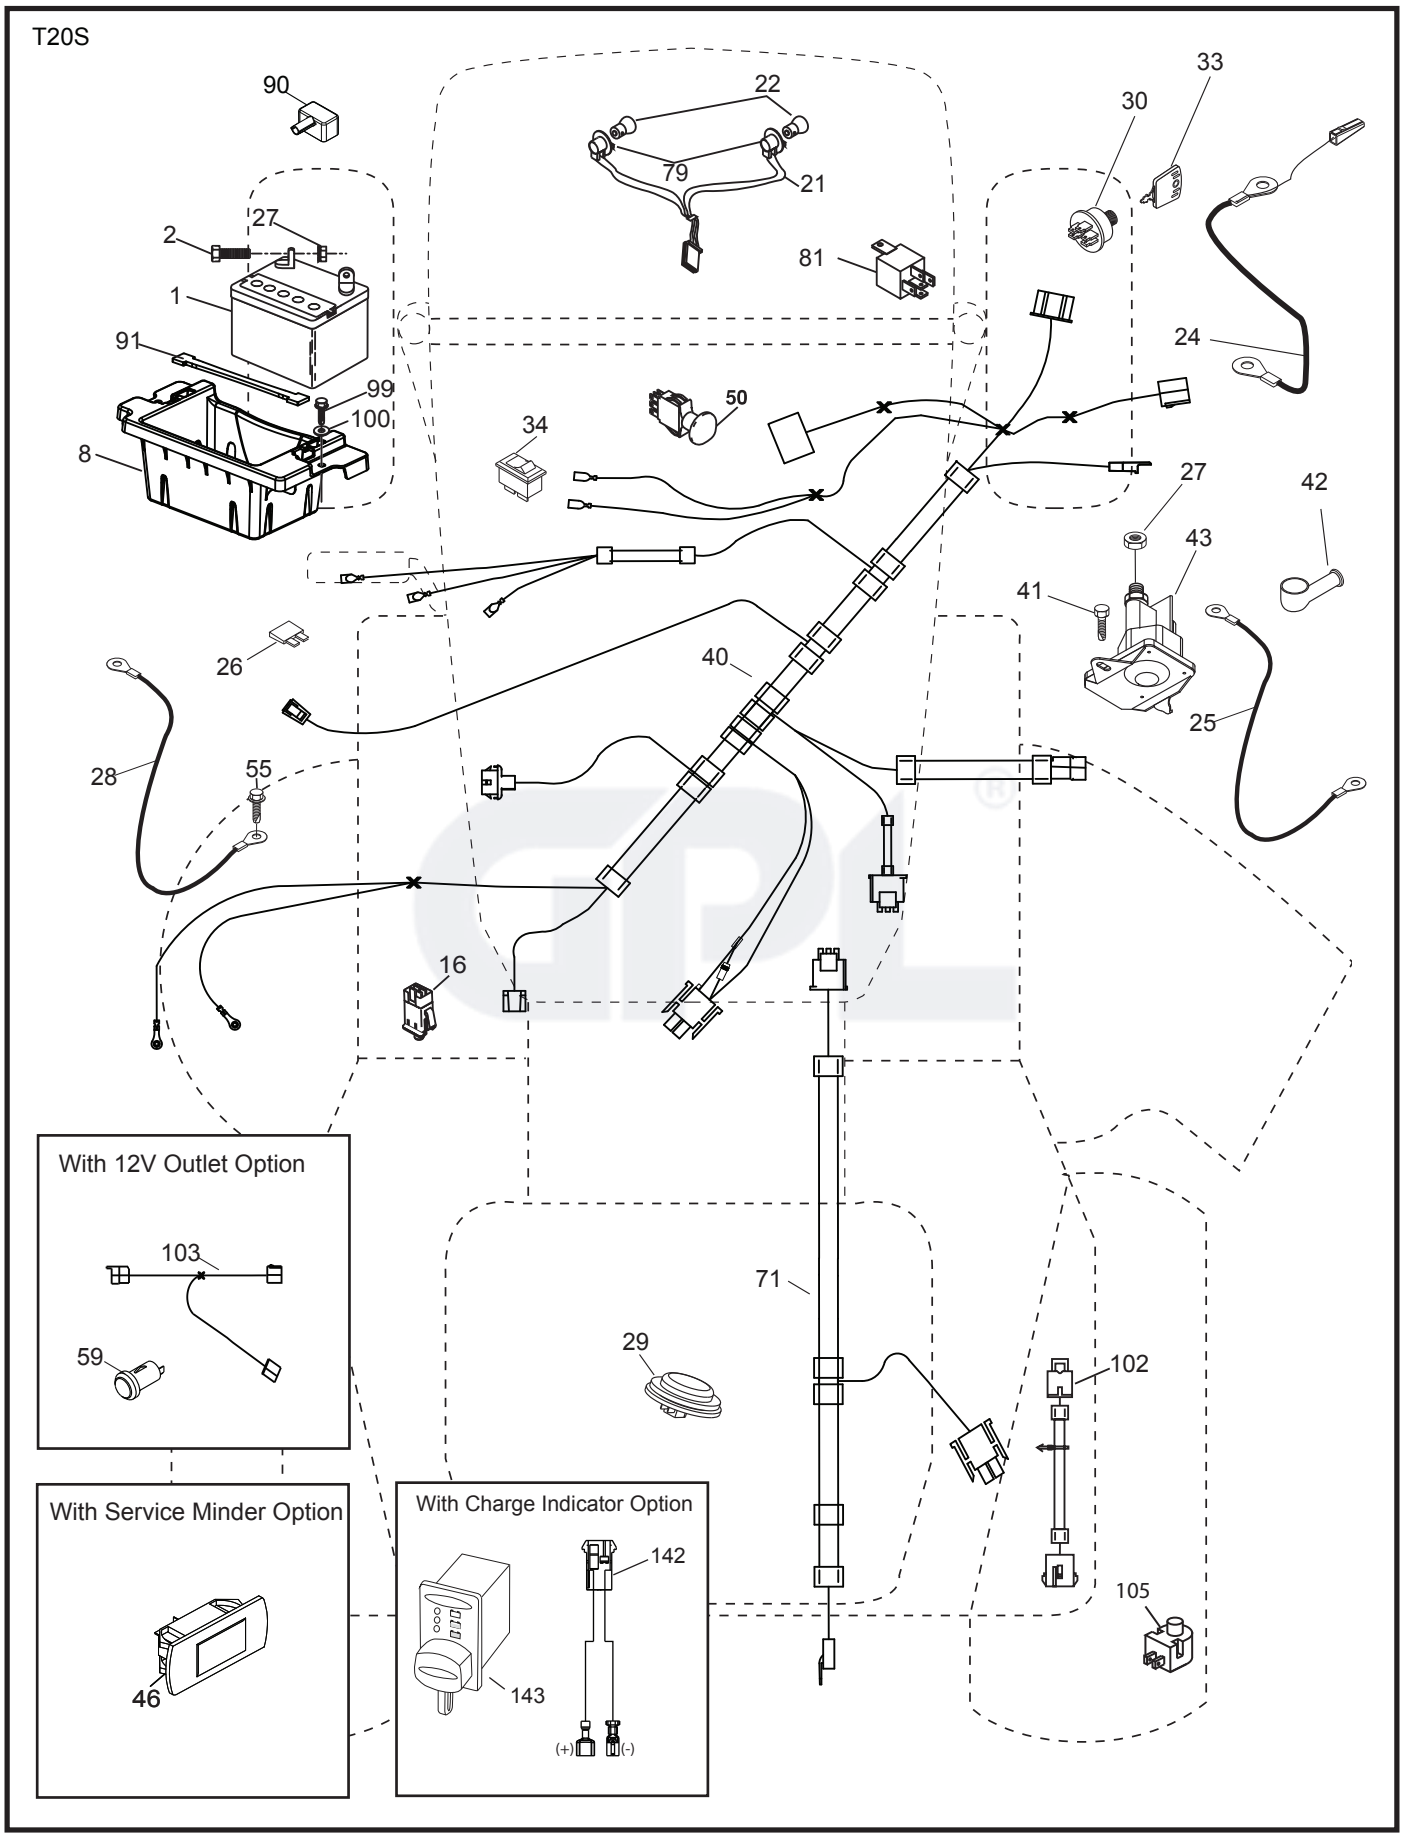

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 16 34-65 | Battery |
| 2 | 874 76 04-12 | Bolt Hex Head 1/4-20 x 3/4 |
| 8 | 532 18 64-91 | Box Battery |
| 16 | 532 17 61-38 | Switch Interlock Push-In |
| 21 | 532 40 02-52 | Harness Socket Light w/4152J |
| 22 | 532 00 41-52 | Bulb Light |
| 24 | 532 40 02-53 | Cable Battery |
| 25 | 532 41 28-95 | Cable Starter |
| 26 | 532 17 51-58 | Fuse |
| 27 | 873 51 04-00 | Nut Keps Hex 1/4-20 unc |
| 28 | 532 14 54-91 | Cable, Ground |
| 29 | 532 40 15-45 | Switch, Seat |
| 30 | 532 19 33-50 | Switch, Ign |
| 33 | 532 41 19-35 | Key\Chain |
| 34 | 532 11 07-12 | Switch Light / Reset |
| 40 | 532 40 96-14 | Harness Ign. Dash |
| 41 | 817 72 04-08 | Screw Thd Cut 1/4-20 x 1/2 |
| 42 | 532 13 15-63 | Cover, Terminal |
| 43 | 532 19 25-07 | Solenoid |
| 46 | 532 40 17-63 | Gauge Servicereminder Hrmtr |
| 50 | 532 17 46-51 | Switch PTO |
| 55 | 817 06 05-12 | Screw Thdrol 5/16-18 x 3/4 TYTT |
| 71 | 532 19 42-76 | Harness Ign. |
| 79 | 532 17 52-42 | Socket Asm Bulb Twistlock |
| 81 | 532 40 96-15 | Relay Harness Sealed |
| 90 | 532 43 53-95 | Cover Terminal |
| 91 | 532 19 02-70 | Strap Battery Mount |
| 99 | 817 67 04-12 | Screw Hexwsh Thdrol 1/4-20 x 3/4 |
| 100 | 819 09 14-16 | Washer 9/32 x 7/8 x 16 Ga. |
| 102 | 532 40 44-54 | Harness Pigtail |
| 105 | 532 40 75-68 | Switch Reverse TT Pedal Control |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

# TRACTOR - - MODEL NO. YTH 223T (96041021000), PRODUCT NO. 960 41 02-10

## CHASSIS AND ENCLOSURES 39

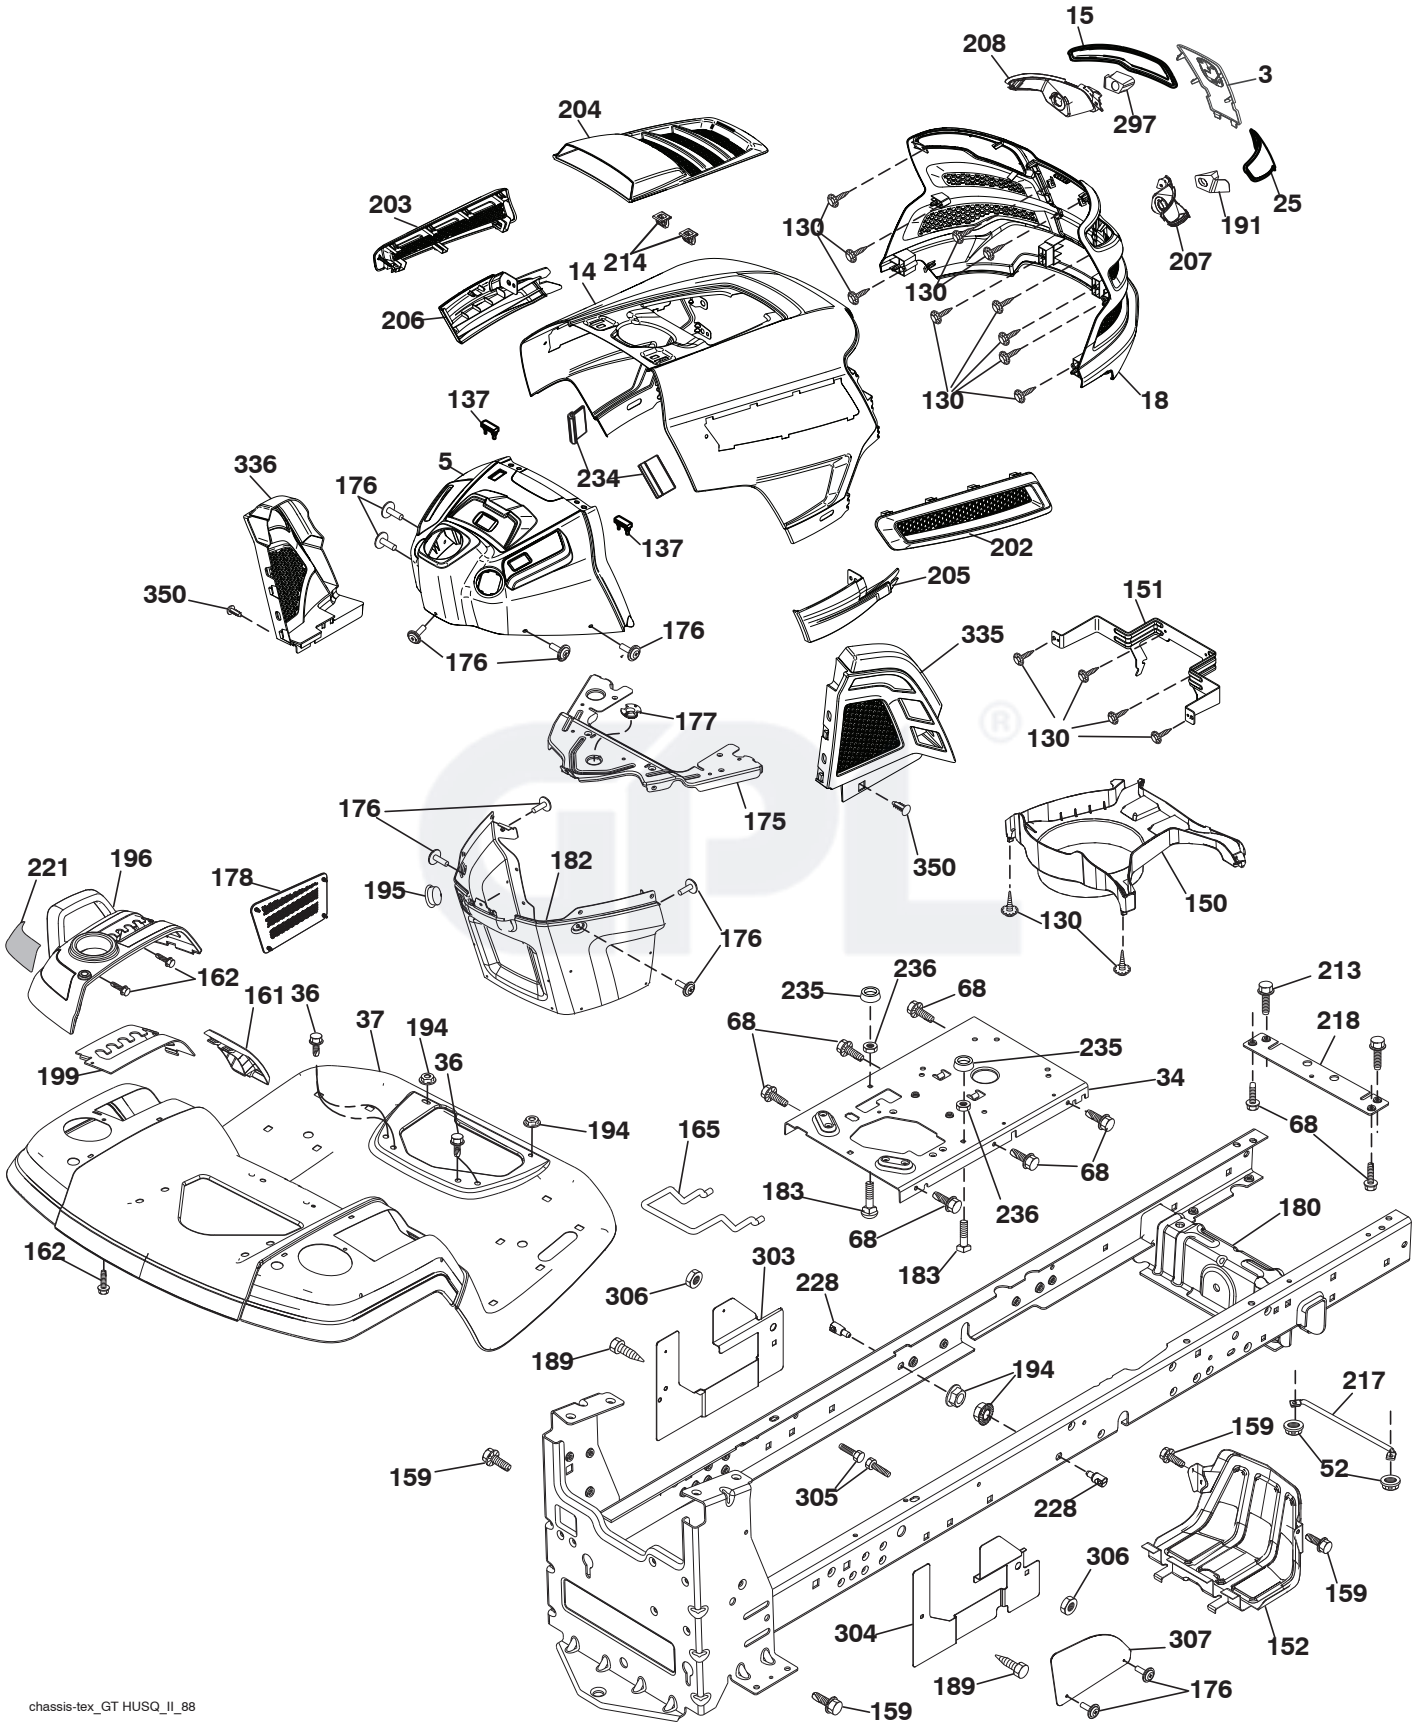


chassis-tex_GT HUSQ_II_88

# TRACTOR - - MODEL NO. YTH 223T (96041021000), PRODUCT NO. 960 41 02-10
## CHASSIS AND ENCLOSURES 39

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 3 | 532 43 97-52 | Applique |
| 5 | 532 43 74-72 | Dash |
| 14 | 532 44 11-77 | Hood |
| 15 | 532 43 97-33 | Lens LH |
| 18 | 532 43 77-62 | Grille/Lens Asm. |
| 25 | 532 43 97-32 | Lens RH |
| 34 | 532 19 61-25 | Plate Engine |
| 36 | 817 06 05-12 | Screw 5/16-18 x 3/4 |
| 37 | 532 40 18-25 | Fender |
| 52 | 873 68 05-00 | Nut Lock 5/16-18 |
| 68 | 817 49 05-08 | Screw Thdrol 5/16-18 x 1/2 |
| 130 | 532 41 63-58 | Screw 10 x .750 BOS Thread |
| 137 | 532 40 75-90 | Bumper Dash |
| 150 | 532 43 97-74 | Air Duct |
| 151 | 532 43 66-70 | Bracket Pivot Hood |
| 152 | 532 43 98-70 | Shield Browning |
| 159 | 817 00 06-12 | Screw Hexwsh Thdr 3/8-16 x 3/4 |
| 161 | 532 40 18-26 | Window, Fuel |
| 162 | 532 14 24-32 | Screw Hex Wsh 1/4 x 1/2 unc |
| 165 | 532 19 68-26 | Support Tank Rear |
| 175 | 532 19 63-04 | Crossmember |
| 176 | 532 40 07-76 | Screw 10-24 x 5/8 |
| 177 | 532 19 52-27 | Bushing Steering |
| 178 | 532 19 97-82 | Cargo Net Asm. |
| 180 | 532 41 50-64 | Chassis |
| 182 | 532 40 68-59 | Dash Lower |
| 183 | 874 52 05-20 | Bolt 5/16-18 x 1-1/4 Full Thd. |
| 189 | 817 00 05-12 | Screw 5/16-18 x 3/4 |
| 191 | 532 43 74-55 | Insert Reflective LH |
| 194 | 873 90 05-00 | Nut Lock Hex Flange 5/16-18 |
| 195 | 532 40 41-37 | Plug Hole |
| 196 | 532 40 02-99 | Console Asm Decklift |
| 199 | 532 19 82-59 | Plate Deck Lift |
| 202 | 532 43 97-28 | Vent Side Hood RH |
| 203 | 532 43 97-27 | Vent Side Hood LH |
| 204 | 532 43 57-14 | Vent Top Hood |
| 205 | 532 43 97-30 | Skirt Hood Side RH |
| 206 | 532 43 97-29 | Skirt Hood Side LH |
| 207 | 532 43 97-34 | Bezel RH |
| 208 | 532 43 97-35 | Bezel LH |
| 213 | 874 76 05-12 | Bolt 5/16-18 x 3/4 |
| 214 | 532 19 91-45 | Clip Retainer Tinner |
| 217 | 532 40 91-67 | Rod Pivot |
| 218 | 532 19 63-95 | X-Piece Hood Stop |
| 221 | 532 19 89-09 | Reflective LH |
| 228 | 532 19 51-61 | Stud Fastner |
| 234 | 532 40 47-42 | Bumper Hood |
| 235 | 532 40 61-29 | Spacer Fender |
| 236 | 873 93 05-00 | Nut Lock 5/16-18 unc |
| 297 | 532 43 74-56 | Insert Reflective RH |
| 303 | 532 42 09-59 | Shield Chassis LH |
| 304 | 532 42 15-09 | Shield Chassis RH |
| 305 | 872 11 06-06 | Bolt 3/8-16 x 3/4 |
| 306 | 873 90 06-00 | Nut Lock 3/8-16 unc |
| 307 | 532 42 45-70 | Upper Shield Pedal |
| 335 | 532 44 82-04 | Cover RH Lower |
| 336 | 532 43 98-46 | Cover LH Lower |
| 350 | 532 44 51-43 | Clip X-mas Tree |
| - - | 532 43 18-83 | Kit Bumper |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

# TRACTOR - - MODEL NO. YTH 223T (96041021000), PRODUCT NO. 960 41 02-10

## DRIVE 40

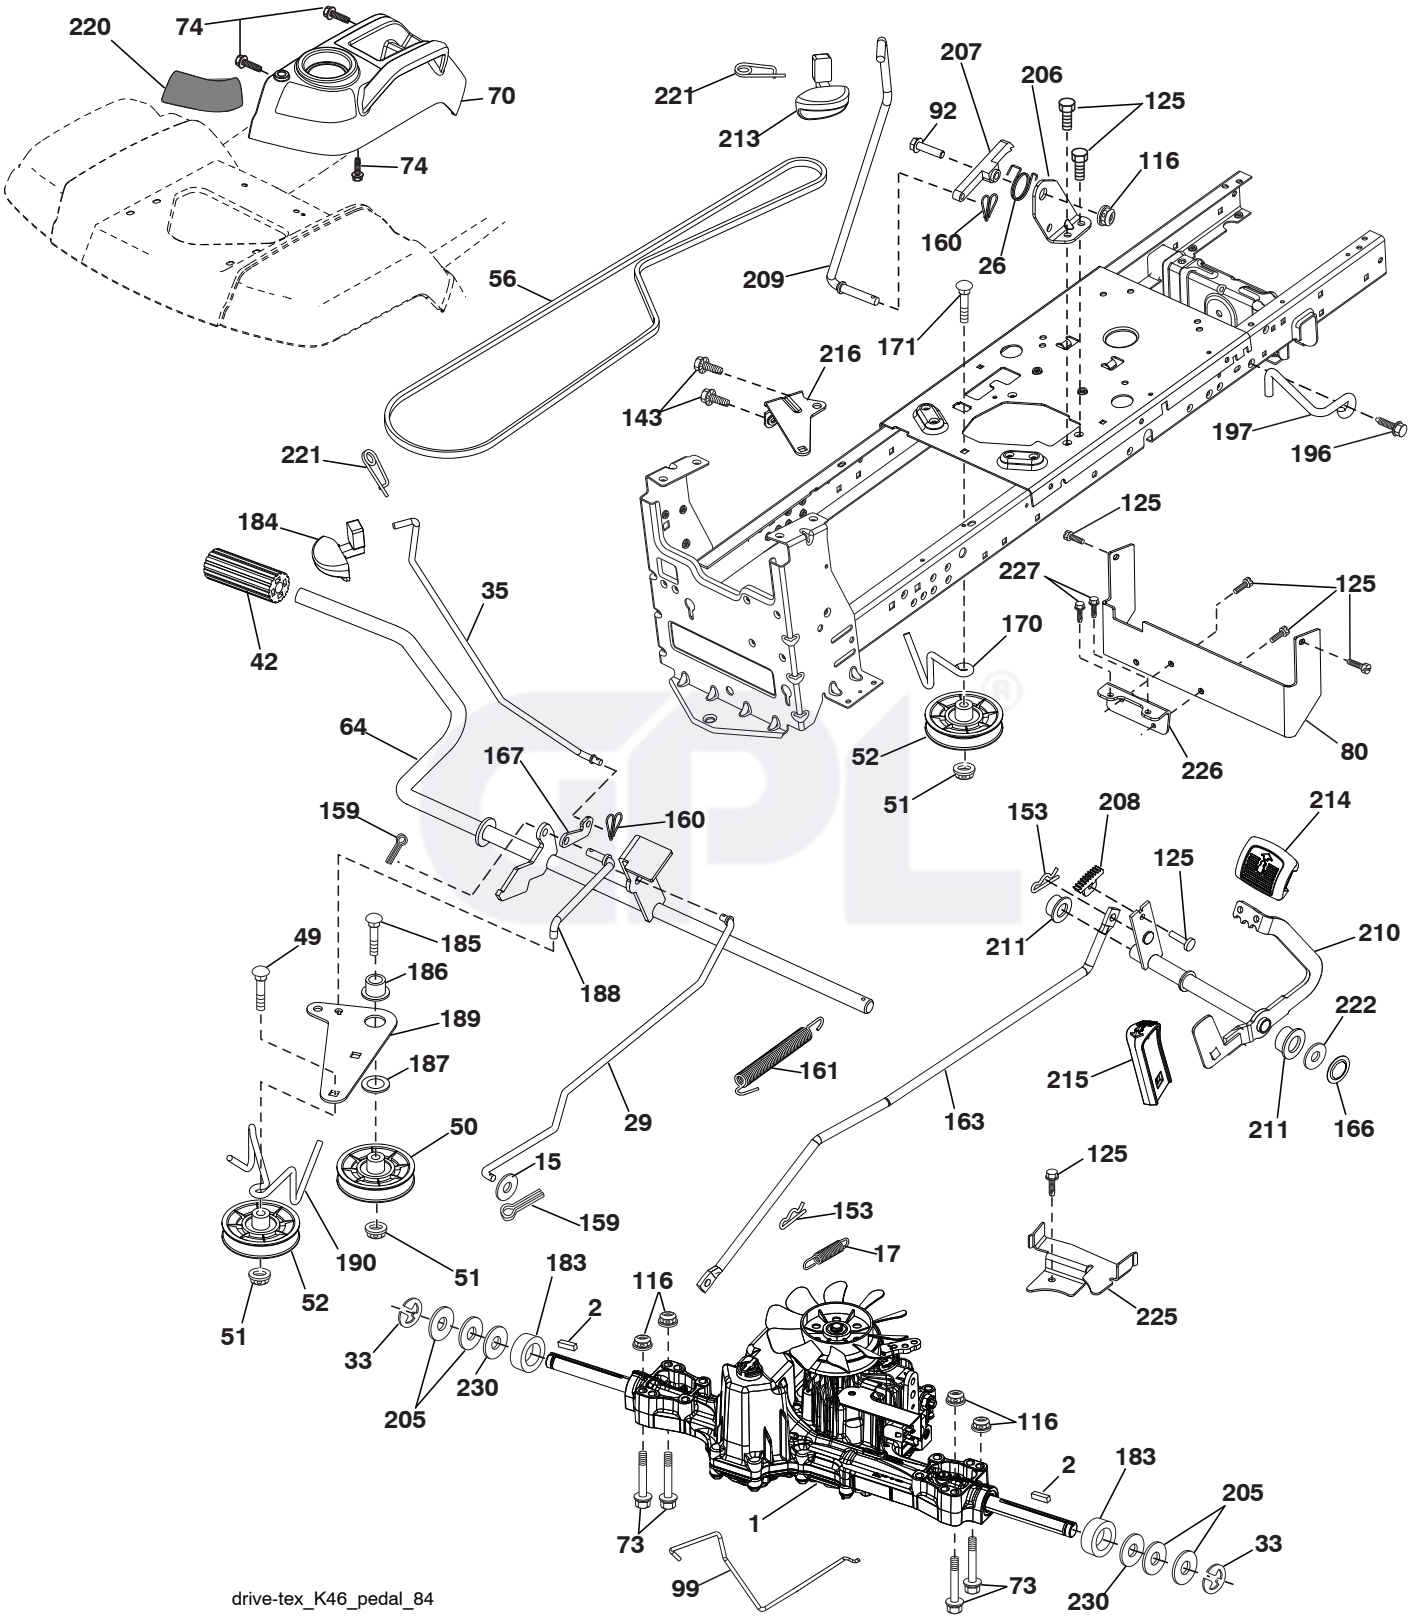


drive-tex_K46_pedal_84

# TRACTOR - - MODEL NO. YTH 223T (96041021000), PRODUCT NO. 960 41 02-10
## DRIVE 40

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | – – – – – – | Transaxle, TUFFTORQ K46BT (Order parts from transaxle manufacturer) |
| 2 | 532 12 35-83 | Key |
| 15 | 819 13 13-16 | Washer 13/32 x 13/16 x 16 Ga. |
| 17 | 532 41 36-78 | Spring, Brake |
| 26 | 532 19 96-79 | Spring Return Cruise |
| 29 | 532 40 38-06 | Rod, Brake |
| 33 | 812 00 00-01 | Ring E |
| 35 | 583 86 45-01 | Rod, Brake, Park |
| 42 | 532 12 48-72 | Cover, Foot Pedal |
| 49 | 872 11 06-14 | Bolt |
| 50 | 532 19 43-27 | Pulley Idler Flat |
| 51 | 873 90 06-00 | Lock Nut 3/8-16 |
| 52 | 532 19 43-26 | Idler V-Groove 910" Offset |
| 56 | 532 13 09-69 | V-Belt, Drive |
| 64 | 532 19 78-65 | Shaft Asm. Pedal Brake Control |
| 70 | 532 40 05-30 | Console Asm |
| 73 | 874 49 05-40 | Bolt Hex Flghd 5/16-18 Gr. 5 |
| 74 | 532 14 24-32 | Screw Hex 1/4 x 1/2 unc |
| 80 | 532 41 00-24 | Bracket Strap Torque |
| 92 | 874 76 05-20 | Bolt Fin Hex 5/16-18 unc x 1.25 |
| 99 | 532 41 57-42 | Rod Spring Bypass |
| 116 | 873 90 05-00 | Nut Lock Hex Flange 5/16-18 |
| 125 | 817 00 05-12 | Screw 5/16-18 x 3/4 |
| 143 | 817 49 05-08 | Screw 5/16-18 x 1/2 |
| 153 | 532 12 47-88 | Retainer Spring |
| 159 | 876 02 04-12 | Pin Cotter 1/8 x 3/4 |
| 160 | 532 16 94-84 | Retainer Clip |
| 161 | 532 10 57-09 | Spring, Return, Clutch |
| 163 | 532 44 82-75 | Rod Pedal Control |
| 166 | 532 42 91-64 | Nut Push |
| 167 | 532 40 52-57 | Latch Brake Parking |
| 170 | 532 19 43-22 | Keeper Belt Centerspan |
| 171 | 872 11 06-16 | Bolt RDHD SQNK 3/8-16 unc x 2 |
| 183 | 532 13 70-57 | Spacer Split |
| 184 | 532 40 31-18 | Handle Parking Brake |
| 185 | 872 11 06-22 | Bolt Rdhd Sqnk 3/8-16 x 2-3/4 Gr. 5 |
| 186 | 532 19 43-21 | Spacer Retainer |
| 187 | 819 13 32-10 | Washer |
| 188 | 532 19 43-23 | Link Clutch Ground Drive |
| 189 | 532 19 43-17 | Bellcrank Ground Drive |
| 190 | 532 19 43-18 | Keeper Bellcrank Ground Drive |
| 196 | 817 00 06-16 | Screw 3/8-16 x 1 |
| 197 | 532 19 58-04 | Bracket Clutch Anti-Rotation |
| 205 | 532 12 17-48 | Washer |
| 206 | 532 19 78-67 | Bracket Mount Latch Cruise |
| 207 | 532 19 78-68 | Latch Control Cruise |
| 208 | 532 19 78-69 | Gear Sector Control Cruise |
| 209 | 532 19 95-92 | Rod Control Cruise |
| 210 | 532 40 09-80 | Rocker Asm. Pedal Control |
| 211 | 532 12 01-83 | Bearing Nylon |
| 213 | 532 40 31-19 | Knob Control Cruise |
| 214 | 532 42 12-63 | Pedal Forward |
| 215 | 532 40 17-23 | Pedal Reverse |
| 216 | 532 19 61-31 | Bracket Pulley Idler |
| 220 | 532 19 89-08 | Reflector RH |
| 221 | 532 40 31-87 | Retainer Spring Clip Handle |
| 222 | 879 21 20-10 | Washer 21/32 x 1-1/4 x 10 Ga. |
| 225 | 532 40 33-19 | Keeper Belt Trans. |
| 226 | 532 40 15-64 | Bracket Mount Touque |
| 230 | 532 18 89-67 | Washer Hardened |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

## TRACTOR - - MODEL NO. YTH 223T (96041021000), PRODUCT NO. 960 41 02-10
## ENGINE 24

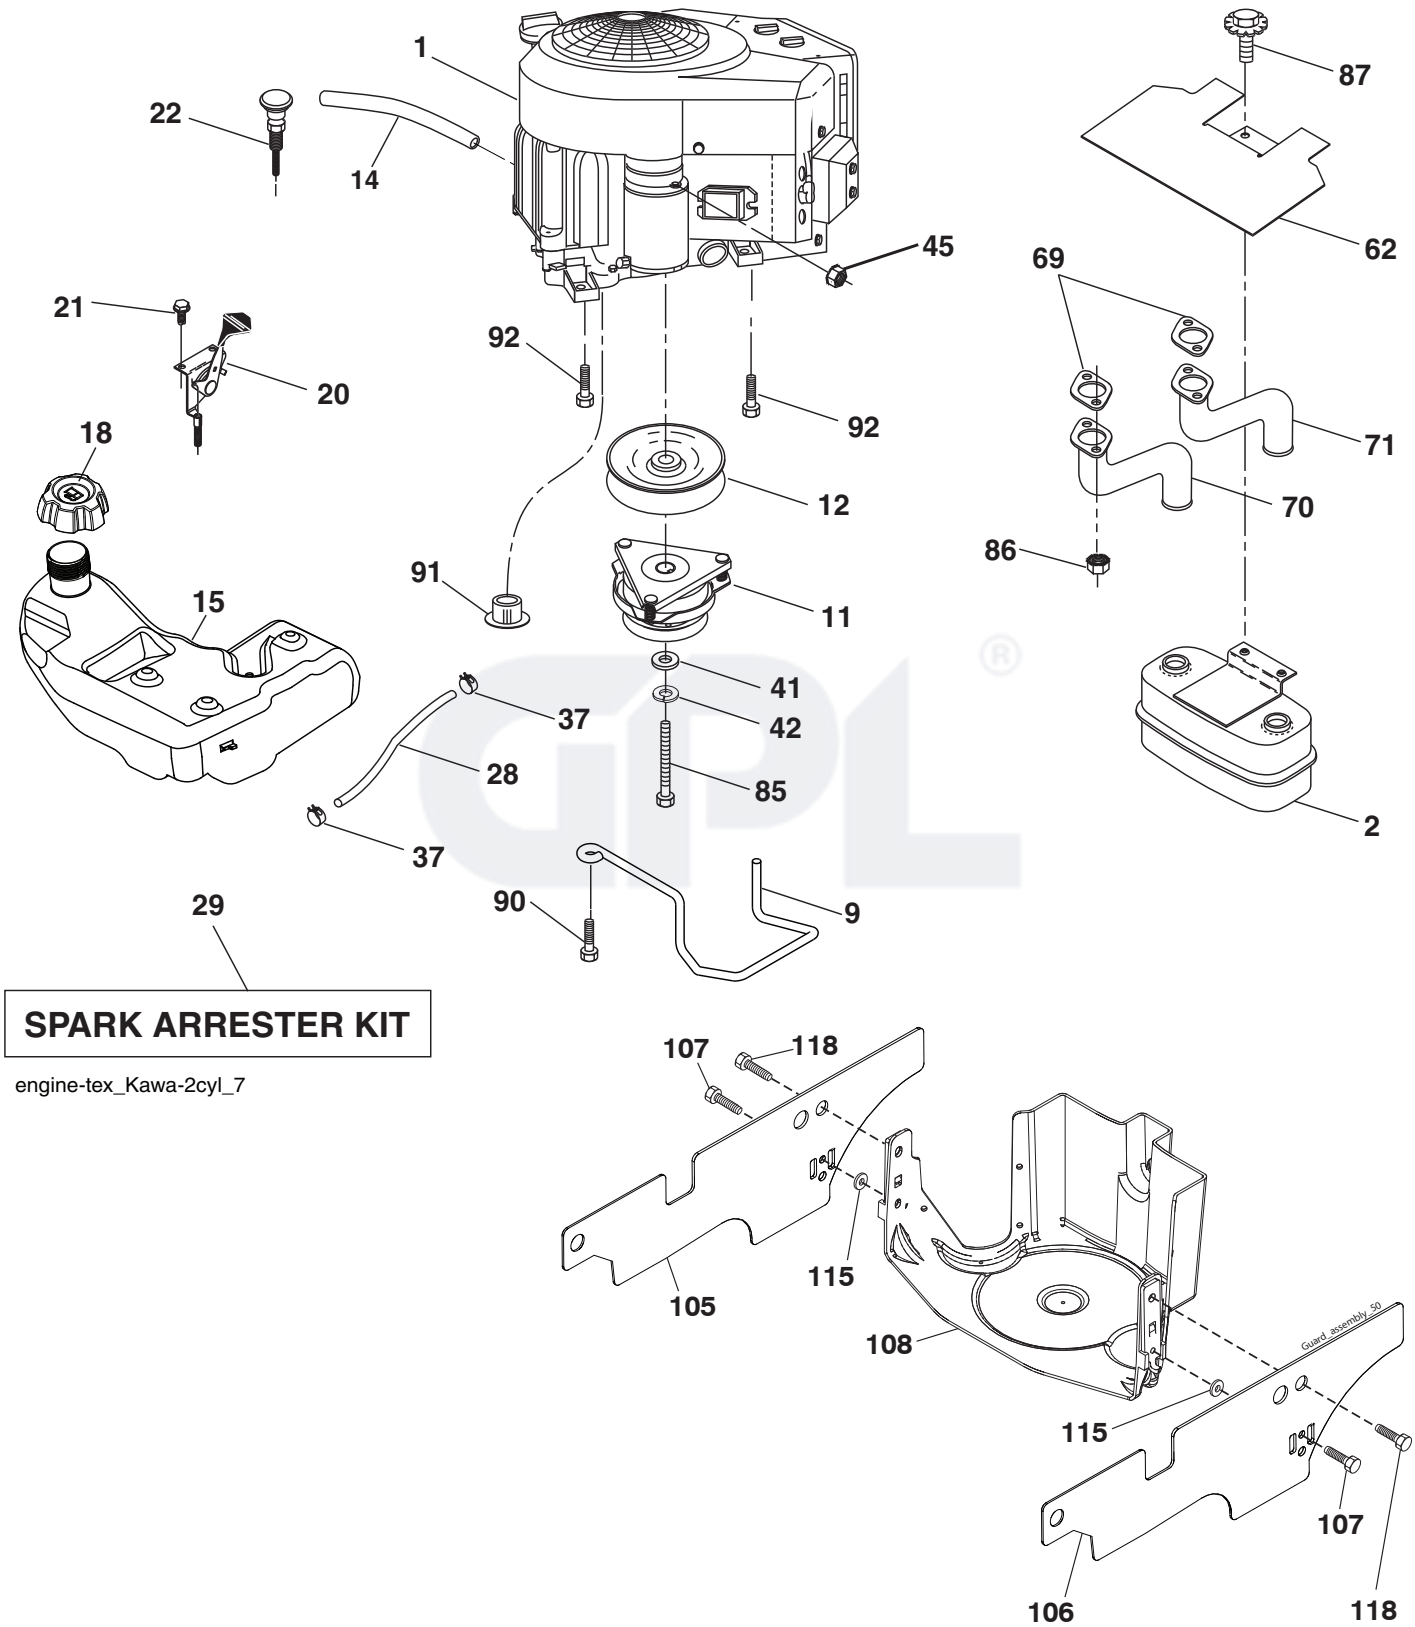

## ENGINE 24

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | – – – – – – | Engine KAWA FS651V-AS50 (Order parts from engine manufacturer) |
| 2 | 532 14 97-23 | Muffler |
| 9 | 532 19 43-20 | Keeper Belt Engine |
| 11 | 532 40 00-08 | Clutch |
| 12 | 532 40 50-97 | Pulley Engine |
| 14 | 532 14 84-56 | Tube Drain Oil |
| 15 | 532 19 34-99 | Tank Fuel |
| 18 | 532 43 02-17 | Cap Asm Fuel |
| 20 | 532 17 83-85 | Control Throttle |
| 21 | 532 41 63-58 | Screw #10 x .750 BOS Thread |
| 22 | 532 19 15-96 | Control Choke |
| 28 | 532 14 21-58 | Fuel Line |
| 29 | 532 13 71-80 | Spark Arrester Kit |
| 37 | 532 12 34-87 | Clamp Hose |
| 41 | 532 12 61-97 | Washer 1-1/2 OD x 15/32 ID x .250 |
| 42 | 810 04 07-00 | Washer Lock 7/16 |
| 45 | 873 51 04-00 | Nut Keps Hex 1/4-20 unc |
| 62 | 532 43 40-17 | Heat Shield |
| 69 | 532 17 81-51 | Gasket |
| 70 | 532 42 47-65 | Exhaust Tube LH |
| 71 | 532 42 47-66 | Exhaust Tube RH |
| 85 | 532 17 39-37 | Bolt Hex 7/16-20 x 4 x Gr. 5-1.5 Thr |
| 86 | 532 18 43-62 | Nut Hex Flange 1.25 |
| 87 | 532 17 18-77 | Bolt 5/16-18 unc x 3/4 w/Sems |
| 90 | 817 00 06-16 | Screw 3/8-16 x 1 |
| 91 | 532 18 74-95 | Bushing |
| 92 | 817 12-06-16 | Screw 3/8-16 x 1 |
| 105 | 532 41 56-06 | Side Shield LH |
| 106 | 532 41 56-11 | Side Shield RH |
| 107 | 532 13 77-29 | Screw 1/4 - 20 x 5/8 |
| 108 | 532 42 68-03 | Cover Asm |
| 115 | 532 42 30-62 | Palnut 1/4 |
| 118 | 817 67 05-08 | Screw 5/16-18 x 1/2 |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

# TRACTOR - - MODEL NO. YTH 223T (96041021000), PRODUCT NO. 960 41 02-10

## STEERING ASSEMBLY 41

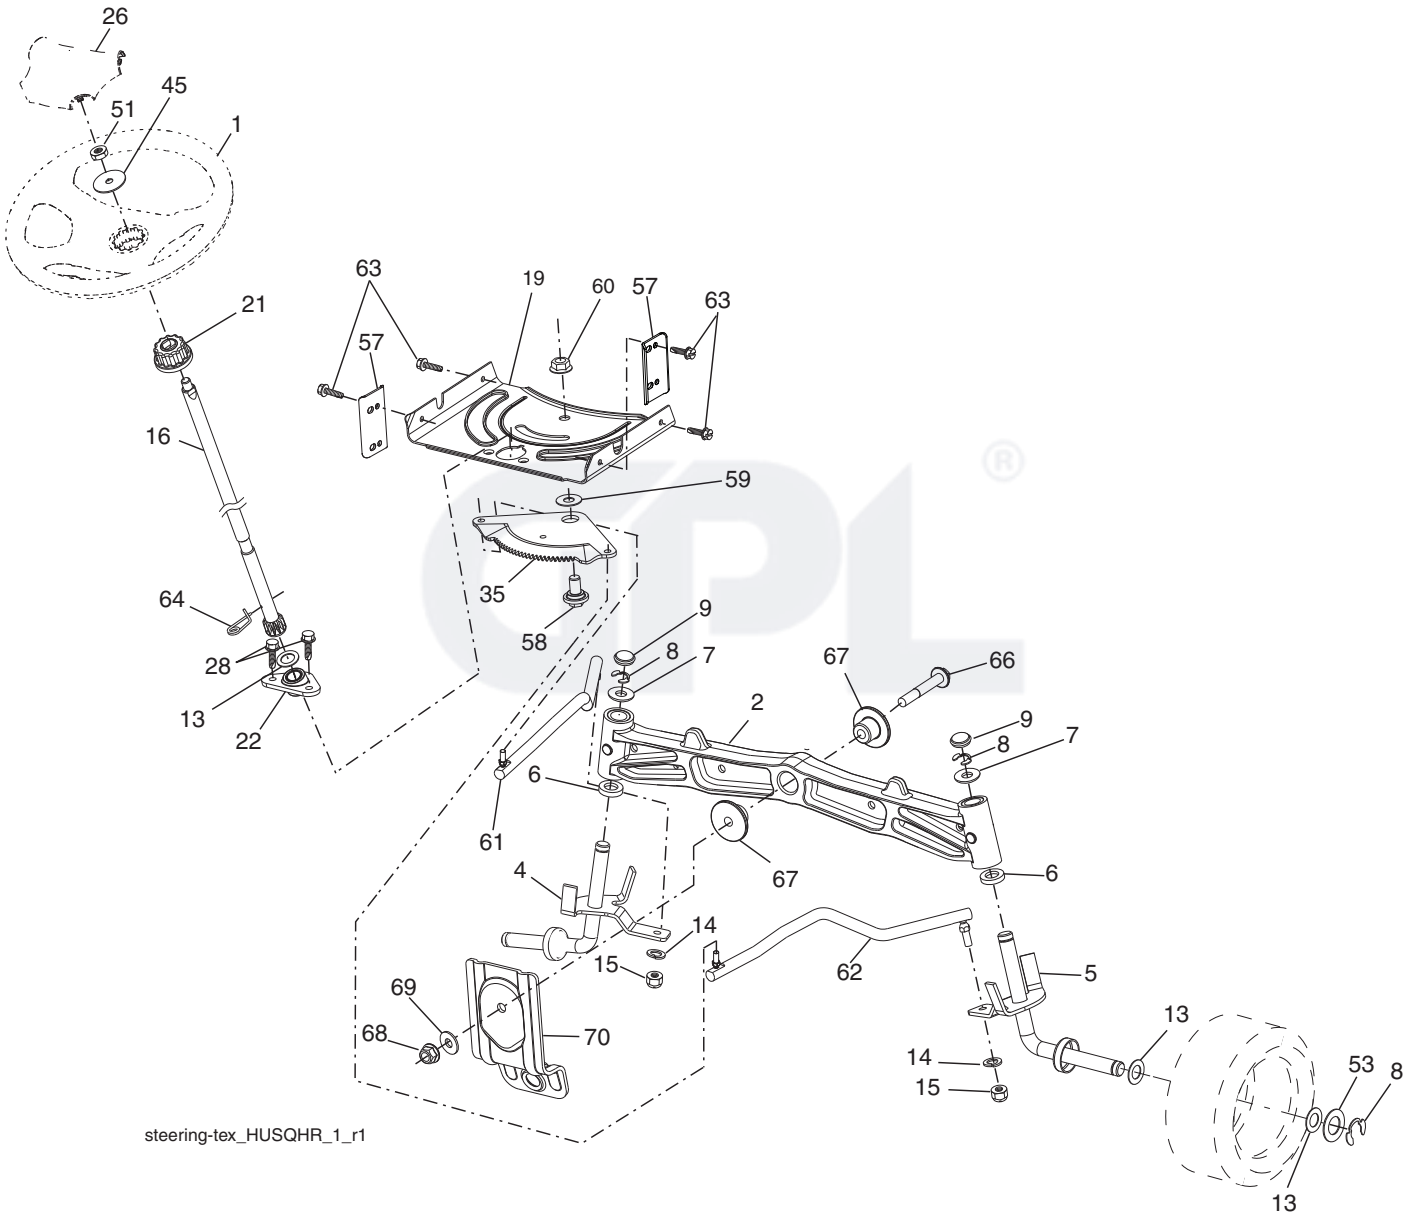

# TRACTOR - - MODEL NO. YTH 223T (96041021000), PRODUCT NO. 960 41 02-10
## STEERING ASSEMBLY 41

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 41 64-80 | Wheel, Steering |
| 2 | 532 19 59-68 | Axle Asm., Front |
| 4 | 532 40 30-87 | Spindle Asm., LH |
| 5 | 532 40 30-88 | Spindle Asm., RH |
| 6 | 532 12 49-31 | Bearing, Race Thrust Harden |
| 7 | 532 12 17-48 | Washer 25/32 x 1-5/8 x 16 Ga. |
| 8 | 812 00 00-29 | Ring, Klip #T5304-75 |
| 9 | 532 12 12-32 | Cap, Spindle |
| 13 | 532 12 17-49 | Washer 25/32 x 1-1/4 x 16 Ga. |
| 14 | 810 04 06-00 | Washer, Lock Hvy Hlcl Spr 3/8 |
| 15 | 873 54 06-00 | Nut, Crown Lock 3/8-24 unf |
| 16 | 532 19 47-46 | Shaft Steering |
| 19 | 532 19 47-29 | Plate Steering |
| 21 | 532 18 67-37 | Adapter, Wheel Steering |
| 22 | 532 42 05-37 | Strg. Supt. Lower |
| 26 | 532 41 59-87 | Insert, Wheel Steering |
| 28 | 817 00 06-12 | Screw 3/8-16 x 3/4 |
| 35 | 532 19 47-32 | Gear, Sector Plate |
| 45 | 819 18 38-12 | Washer 9/16 ID x 2-3/8 OD 12 Ga. |
| 51 | 873 94 08-00 | Nut Hex Jam Toplock 1/2-20 unf |
| 53 | 532 18 89-67 | WasherHardened.793x1.637x.060 |
| 57 | 532 40 74-65 | Bracket Upstop |
| 58 | 532 19 47-47 | Bolt Shoulder Sector Pivot CFM |
| 59 | 532 19 47-48 | Washer Thrust Sector Steering |
| 60 | 873 97 10-00 | Nut Flange Lock 5/8-11 |
| 61 | 532 19 47-40 | Draglink LH |
| 62 | 532 19 47-41 | Draglink, RH |
| 63 | 817 00 05-12 | Screw 5/16-18 x 3/4 |
| 64 | 532 19 98-49 | Retainer Clip Spring Steering |
| 66 | 871 02 07-48 | Bolt Hex Fghd 7/16-14 x 3 Serr |
| 67 | 532 19 47-37 | Bushing PM Front Axle |
| 68 | 873 90 07-00 | Nut Lock Flange 7/16-14 Gr. 5 |
| 69 | 532 19 91-62 | Washer 1.5 x .505 x .118 |
| 70 | 532 19 61-97 | Bracket Deck Susp. Front |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

# TRACTOR - - MODEL NO. YTH 223T (96041021000), PRODUCT NO. 960 41 02-10

## SEAT ASSEMBLY 42

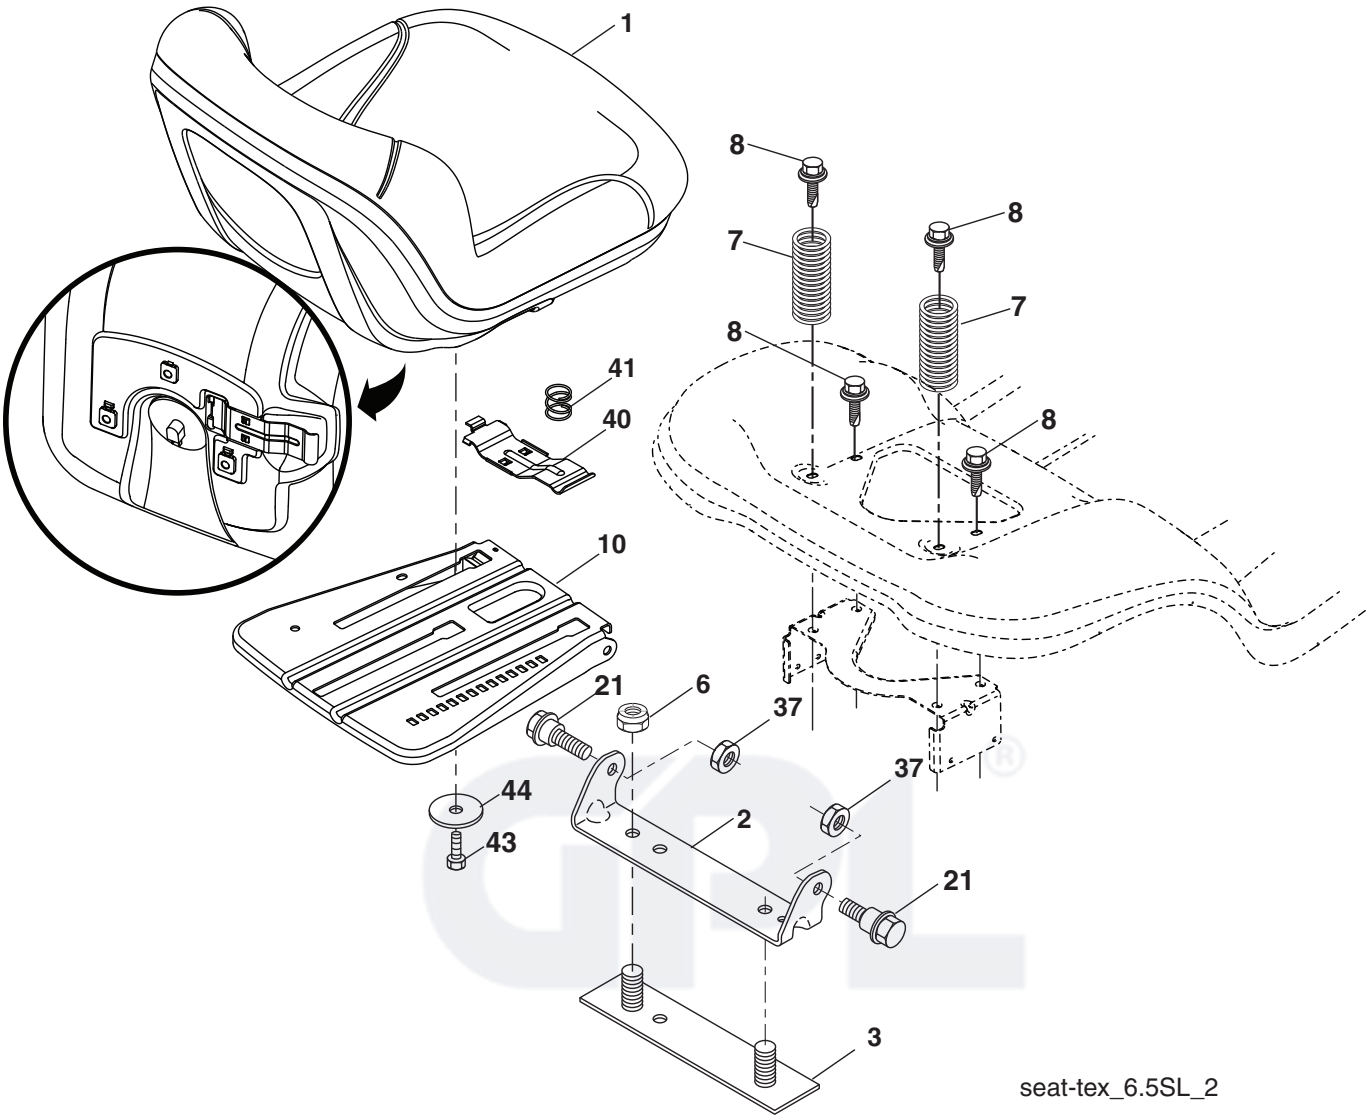


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 42 40-71 | Seat |
| 2 | 532 18 01-66 | Bracket Pivot Fender |
| 3 | 532 14 06-75 | Strap, Asm Fender |
| 6 | 873 80 06-00 | Nut, Lock W/Ins. 3/8-16 unc |
| 7 | 532 12 41-81 | Spring, Seat Cprsn |
| 8 | 532 17 18-77 | Bolt 5/16-18 unc x 3/4 w/Sems |
| 10 | 532 19 69-77 | Pan, Seat |
| 21 | 532 17 18-52 | Bolt, Shoulder 5/16-18 |

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 37 | 873 80 05-00 | Nut, Lock 5/16-18 unc |
| 40 | 532 19 76-61 | Handle Slide Seat |
| 41 | 532 19 82-00 | Spring Latch Seat |
| 43 | 874 76 06-12 | Bolt Fin Hex 3/8-16 unc x 3/4 |
| 44 | 819 13 38-12 | Washer 13/32 x 2-3/8 x 12 Ga. |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

# TRACTOR - - MODEL NO. YTH 223T (96041021000), PRODUCT NO. 960 41 02-10

## MOWER LIFT 45

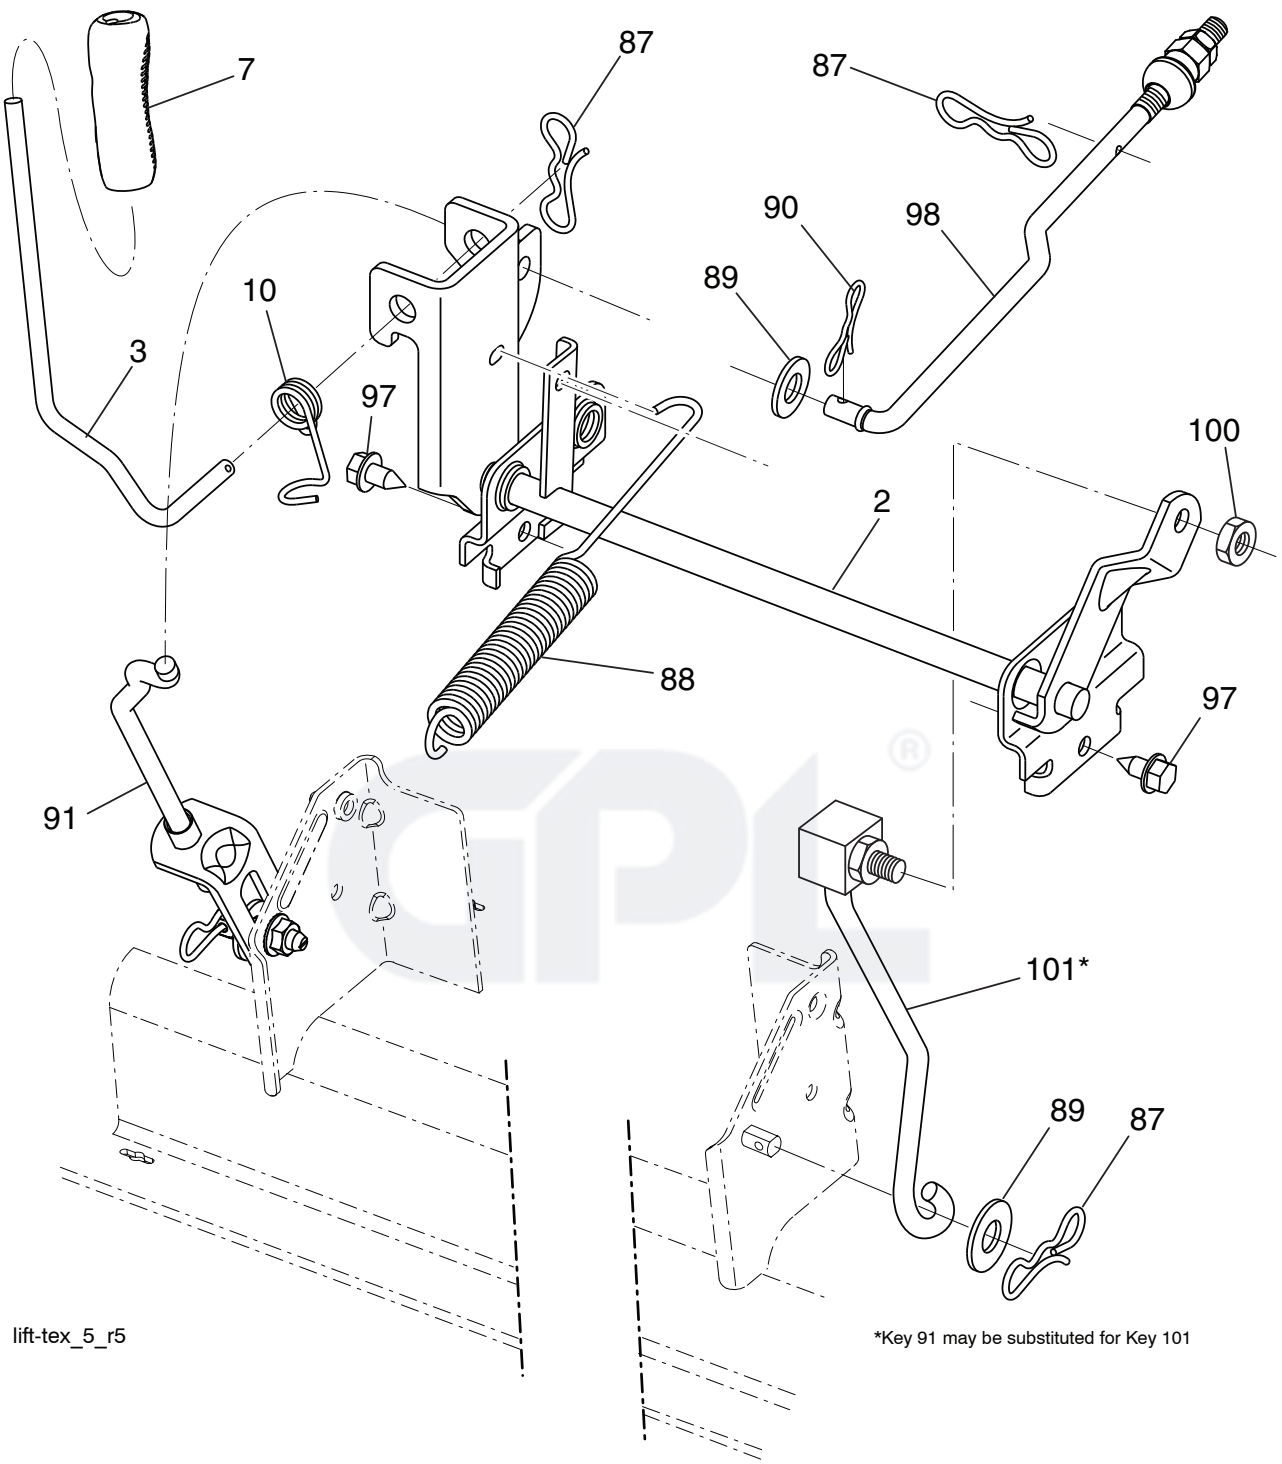


| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 2 | 532 42 20-27 | Shaft Asm., Lift |
| 3 | 532 19 52-30 | Lever Lift Handle |
| 7 | 532 41 15-55 | Grip, Lever |
| 10 | 532 19 63-14 | Spring Torsion |
| 87 | 532 19 42-09 | Pin Cotter 7/16 Bow Tie Lock |
| 88 | 532 41 07-10 | Spring Lift Assist |
| 89 | 819 19 19-12 | Washer Clear Zinc |
| 90 | 532 19 42-08 | Pin Cotter 5/16 Bow Tie Lock |
| 91 | 532 19 51-81 | Link Lift Susp Mower Rear |
| 97 | 817 00 06-12 | Screw 3/8-16 x 3/4 |
| 98 | 532 19 52-70 | Link Asm. Susp. Front Mower |
| 100 | 873 93 06-00 | Nut Centerlock 3/8-16 unc |
| 101 | 532 40 70-03 | Link Lift Asm Fxd |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm

# TRACTOR - - MODEL NO. YTH 223T (96041021000), PRODUCT NO. 960 41 02-10

## MOWER DECK 44

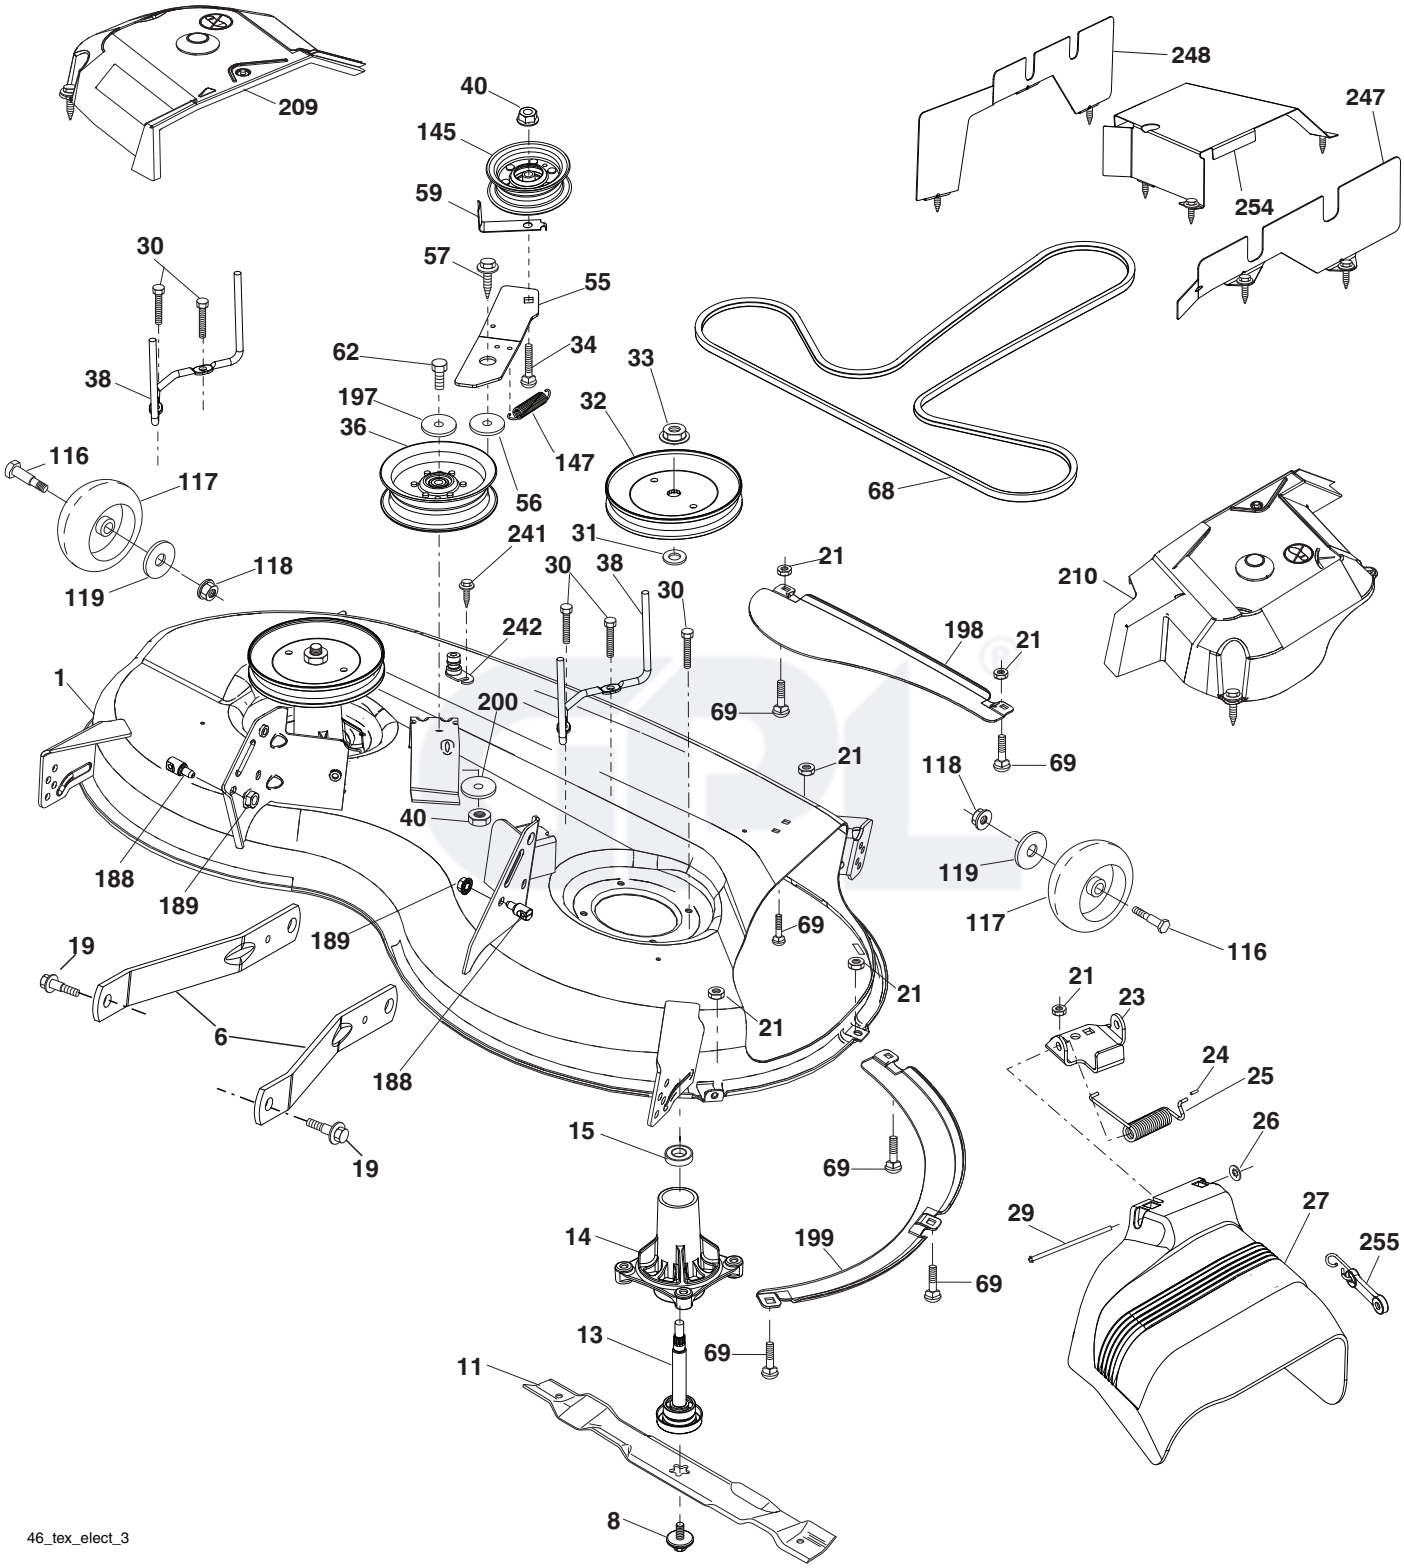

# TRACTOR - - MODEL NO. YTH 223T (96041021000), PRODUCT NO. 960 41 02-10
## MOWER DECK 44

| KEY NO. | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 532 44 23-72 | Mower Housing |
| 6 | 532 19 51-86 | Arm Suspension |
| 8 | 532 19 30-03 | Bolt/Washer asm 7/16-20 unf |
| 11 | 532 40 53-80 | Blade Mower Hi Lift |
| 13 | 532 19 28-72 | Shaft Assembly, Mandrel |
| 14 | 532 18 72-81 | Housing, Mandrel |
| 15 | 532 11 04-85 | Bearing, Ball, Mandrel |
| 19 | 532 19 65-39 | Bolt, Shoulder |
| 21 | 873 68 05-00 | Nut |
| 23 | 532 19 25-57 | Bracket, Deflector |
| 24 | 532 10 53-04 | Cap, Sleeve |
| 25 | 532 19 70-26 | Spring, Torsion, Deflector |
| 26 | 532 11 04-52 | Nut, Push |
| 27 | 532 44 28-95 | Shield, Deflector |
| 29 | 532 13 14-91 | Rod, Hinge |
| 30 | 532 17 39-84 | Screw Thdrol Rolling Wsh Hd |
| 31 | 532 18 76-90 | Washer, Spacer |
| 32 | 532 19 74-73 | Pulley, Mandrel |
| 33 | 532 40 02-34 | Nut, Toplock, Flanged |
| 34 | 872 11 06-12 | Bolt Carr Sh. 3/8-16 x 1-1/2 Gr. 5 |
| 36 | 532 19 73-79 | Pulley, Idler, Flat |
| 38 | 532 19 91-89 | Belt Keeper LH |
| 40 | 873 90 06-00 | Nut, Lock Flg. 3/8-16 unc |
| 46 | 532 13 77-29 | Screw |
| 55 | 532 19 72-49 | Arm, Idler |
| 56 | 532 19 90-92 | Spacer, Retainer |
| 57 | 817 00 06-16 | Screw Hexwsh Thd 3/8-16 x 1 |
| 59 | 532 14 10-43 | Guard, Tuv Idler (94) |
| 62 | 874 52 06-36 | Bolt 3/8-16 unc x 2-1/4 Gr. 5 |
| 68 | 532 40 51-43 | V-Belt |
| 69 | 872 14 05-05 | Bolt |
| 116 | 532 19 34-06 | Bolt, Shoulder |
| 117 | 532 17 48-73 | Wheel, Gauge |
| 118 | 873 93 06-00 | Nut Centerlock 3/8-16 unc |
| 119 | 819 13 20-12 | Washer 13/32 x 1-1/2 x 11 Ga. |
| 145 | 532 19 31-97 | Pulley Idler |
| 147 | 532 19 72-51 | Spring Return |
| 188 | 532 19 51-61 | Stud Fastener |
| 189 | 873 90 05-00 | Nut Lock Hex Flange |
| 197 | 819 13 13-12 | Washer 13/32 x 13/16 x 12 Ga. |
| 198 | 532 40 31-49 | Baffle Center Front |
| 199 | 532 40 31-50 | Baffle Front RH |
| 200 | 532 41 35-24 | Washer 13/32 x 1 x 1/2 11 GAHRD |
| 209 | 532 43 23-95 | Cover Asm LH |
| 210 | 532 43 23-96 | Cover Asm RH |
| 241 | 532 15 29-27 | Screw |
| 242 | 532 41 55-98 | Washout Port |
| 247 | 532 43 23-98 | Cover Asm RH |
| 248 | 532 43 23-97 | Cover Asm LH |
| 254 | 532 43 23-99 | Shield Deck Rear |
| 255 | 532 43 60-87 | Kit Bungee (Includes Phillips heas screw, weld nut, screw, bungee latch, and bungee strap) |
| - - | 532 19 28-70 | Mandrel Assembly (Includes housing, shaft assembly, and bearing only - pulley/nut/washer and blade bolt/washers not included) |
| - - | 532 44 09-33 | Replacement Mower, Complete |

**NOTE:** All component dimensions given in U.S. inches
1 inch = 25.4 mm